


Brass Classical Sliding Shower Set

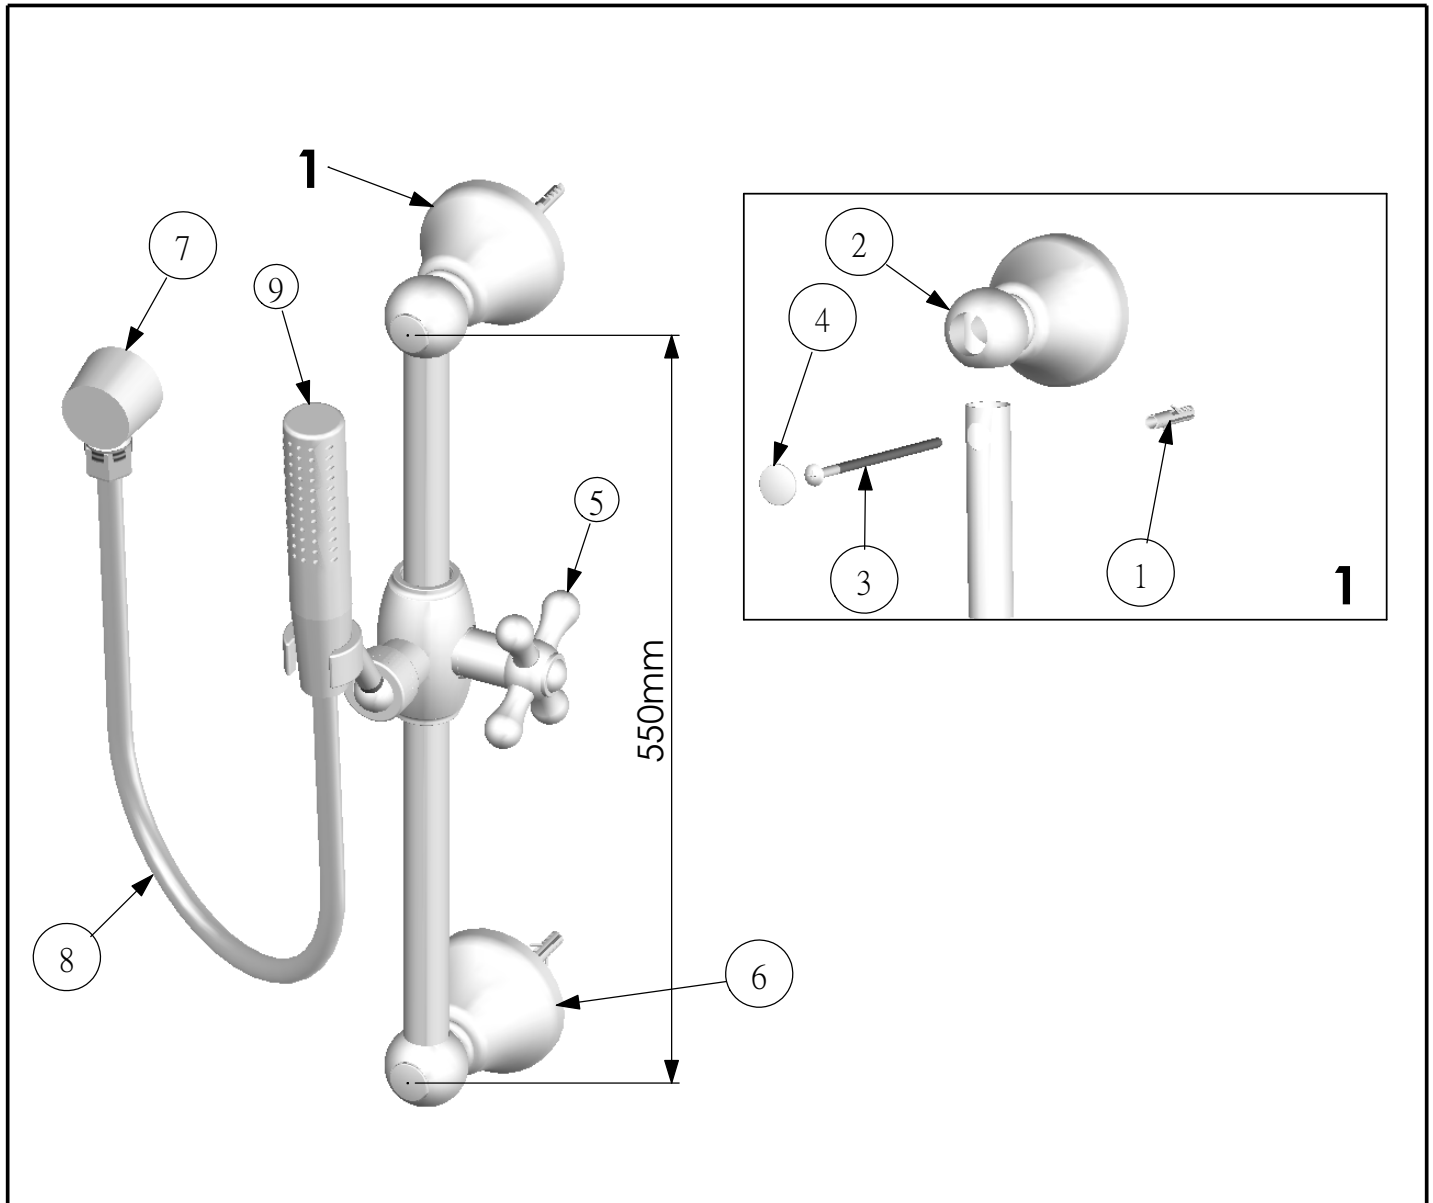

Mounting Instructions

- Position the Centre Slider (5) and Bottom Fixing Bracket (6) .
- Mark the Two Holes to be drilled at approx-550mm centres and drill.
- Remove Caps (4) on the Two Ends.
- Use the Two Wall Plugs provided (1) .
- Position the Two Fixing Brackets (2) over the two holes and screw through the Tube with the screws provided (3) .
- Once Fixed Replace the End Caps (4) .
- Wall elbow with 1/2" NPT male thread connector (7) to wall and connect Flexible Hose (8) and Hand piece (9) .
- Shower kits (two washers and flow restrictors and teflon tape)